


weight locating


a zip tie. Do not include the pulldown hose in the zip tie.

Install the counterweight on the pulldown hose at the marked position (the weight should be placed between this mark), and fix them by a cross screwdriver.

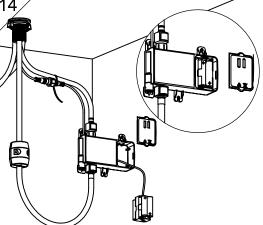


Remove the battery pack cover and take out the battery pack; insert 4 AA batteries. Put the battery pack back in the control box and replace the cover firmly.


When installation steps 1-14 are completed, turn the hot & cold water inlets back on.

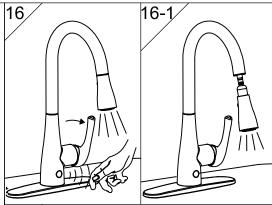


Turn on the faucet by the handle and wave your hand over the Sensor; the water turns on. The water temperature changes by manipulating the handle. Run the water flow and it will stop automatically in 3 minutes. Check for leaks. Then pull out the spray head (the infrared sensor will stop working when the spray head is pulled out and will reactivate in 3 minutes).

Slide the spray head back in original position, and the water turns off. Repeat the operation several times, and check for errors. If none, then the faucet is good for use.

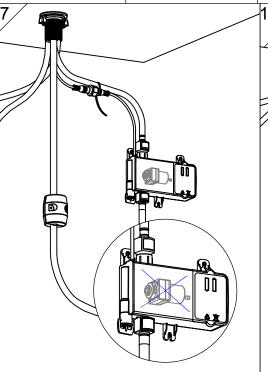

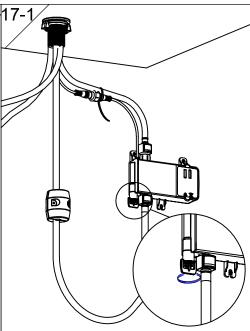

For manual operation, turn the knob beneath the control box counter-clockwise to the end (as shown in figure 17-1). The sensor will be disabled and the faucet will be operational by the handle only.

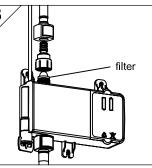

If the water flow rate is lower than normal level, there may be severe blocking in the filter. In this situation, shut off the water valves and remove the supply hose from the control box; loosen the inlet "quick connection" and take out the filter; clean the filter up and reassemble them back.

For good maintainence, turn the handle off when the faucet will not be in use for an extended amount of time.



label

